



Minù

User Manual

Coffee recipes included



Machine Features



On/Off button (machine switches off after 9 minutes of inactivity to conserve energy)

Water tank cover

0.5 ltr water tank

Coffee dispensing dial (towards you for off/away from you for on).

Capsule drawer

Coffee dispensing unit

Excess water drawer

Cup rack

Drip tray



Set Up

Choose a suitable surface for your machine, flat and stable and away from water and heat sources.



Remove and rinse the water tank then fill with fresh cold water to the max level, plug in and switch on. Your Minu should heat up in approximately 30 seconds. When the light is illuminated green (not flashing) it is ready to use.

Espresso

Americano

Select the setting for your cup size and place a cup under the coffee spout

Making a coffee



Insert your chosen capsule

Push the coffee dial back

Your coffee will begin extracting

Pull the lever forward when you have the desired amount of coffee in your cup


Remove the old capsule and discard. Insert a new capsule for the next coffee.

HOW TO MAKE THE PERFECT **AMERICANO** WITH YOUR MINU.




Fill a cup with $\frac{2}{3}$ hot water and place on the cup rack of your Minu machine. Choose your preferred capsule and add an espresso shot directly into the hot water. This guarantees the full flavour of the coffee. Add a splash of cold milk for a white Americano.

NB. Never pour boiling water on to an espresso as this will burn it and create a bitter taste.

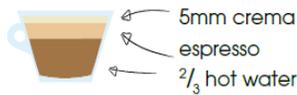


SPECIALITIES USING YOUR MINU MACHINE AND A MILK FROTHER.

Lavazza milk frothers are available to purchase from the Lavazza online shop: storeuk.lavazza.com (but any suitable milk frothing device can be used to make these recipes).

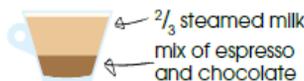

CAFFE MOCHA

Make an espresso and mix in chocolate powder or chocolate syrup. Heat and froth some milk using either the cappuccino or latte setting on your frother, and pour on top of your espresso and chocolate mix.

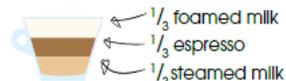

LAYERED LATTE

Heat your milk using the latte setting (without the metal whisk). Pour this in to a tall glass then place your glass on to your Minu cup rack. Next add your chosen espresso directly on top of the hot milk and watch it settle into layers. Stir before drinking.

Descaling



Descal your machine every 3-4 months (more frequently for areas with hard water or high machine usage i.e. more than 2 coffees per day).

1. Fill the tank with an appropriate descaling solution and top up to the max line with fresh cold water.
2. Place a cup under the dispensing spout.
3. Check there is no capsule in the capsule drawer, then draw two cups (approx 150ml each) of water through the coffee spout.
4. Leave the machine for 15-20 minutes.
5. After this period return to the machine and switch back on.
6. Continue to run water from the machine until the tank is empty.
7. Remove the tank, rinse, refill and replace.
8. And finally, to complete the process run a full tank of water through the machine to remove any residue of the descaling solution.
9. Descaling is now complete.

Cleaning and Maintenance

- Empty and clean the drip tray and excess water drawer after every 10 coffees, or every 2/3 days.
- Replace the water in the water tank every day.
- Do not leave water in the circuit for more than 4 days, should this happen then run some water through the coffee spout without a capsule before making your coffee.

TROUBLE SHOOTING

PROBLEM	SOLUTION
MACHINE DOES NOT TURN ON.	MACHINE IS NOT CONNECTED TO THE POWER SUPPLY. ENSURE POWER LEAD IS FIRMLY PUSHED IN AND THE ELECTRICAL SOCKET IS SWITCHED ON.
THE MACHINE REQUIRES A LOT OF TIME TO HEAT UP.	THE MACHINE HAS LIMESCALE BUILD UP. DESCALE THE MACHINE.
THE MACHINE IS VERY NOISY.	THERE IS NO WATER IN THE TANK. TOP UP THE TANK WITH FRESH COLD DRINKING WATER.
RED FLASHING LIGHT.	WATER TANK FITTED INCORRECTLY OR ABSENT – FIT WATER TANK CORRECTLY. OR COFFEE DIAL IN WRONG POSITION – TURN THE COFFEE DIAL TO THE STOP POSITION AND CALL CUSTOMER SERVICES.
THE COFFEE FLOWS OUT TOO FAST AND THERE IS NO CREAMY FROTH (CREMA).	THE CAPSULE HAS ALREADY BEEN USED, REMOVE AND REPLACE WITH A NEW CAPSULE.
NO COFFEE FLOWS, OR IT JUST DRIPS OUT SLOWLY.	THE DISPENSING SPOUT IS CLOGGED – CLEAN THE COFFEE DISPENSING SPOUT. DO THIS BY RUNNING A DOSE OF WATER THROUGH THE COFFEE SPOUT WITHOUT INSERTING A CAPSULE.
NO COFFEE FLOWS OUT AND THE DRIP TRAY FILLS WITH WATER.	THE COFFEE DIAL IS IN THE WRONG POSITION - ENSURE YOU PUSH THE COFFEE DIAL FULLY BACK/AWAY FROM YOU INTO THE 'SUPPLY' POSITION.

DISCOVER THE BLEND FOR YOU



For coffee and machine enquiries
or to place an order please telephone:

Lavazza Customer Services Helpline

0800 599 9200

Lines are open Monday – Friday 8.30am to 5.30pm.



www.lavazzamodomio.co.uk